


LED SECURITY WALL LIGHT

MODEL: MA002X-XXXX

USE AND CARE GUIDE

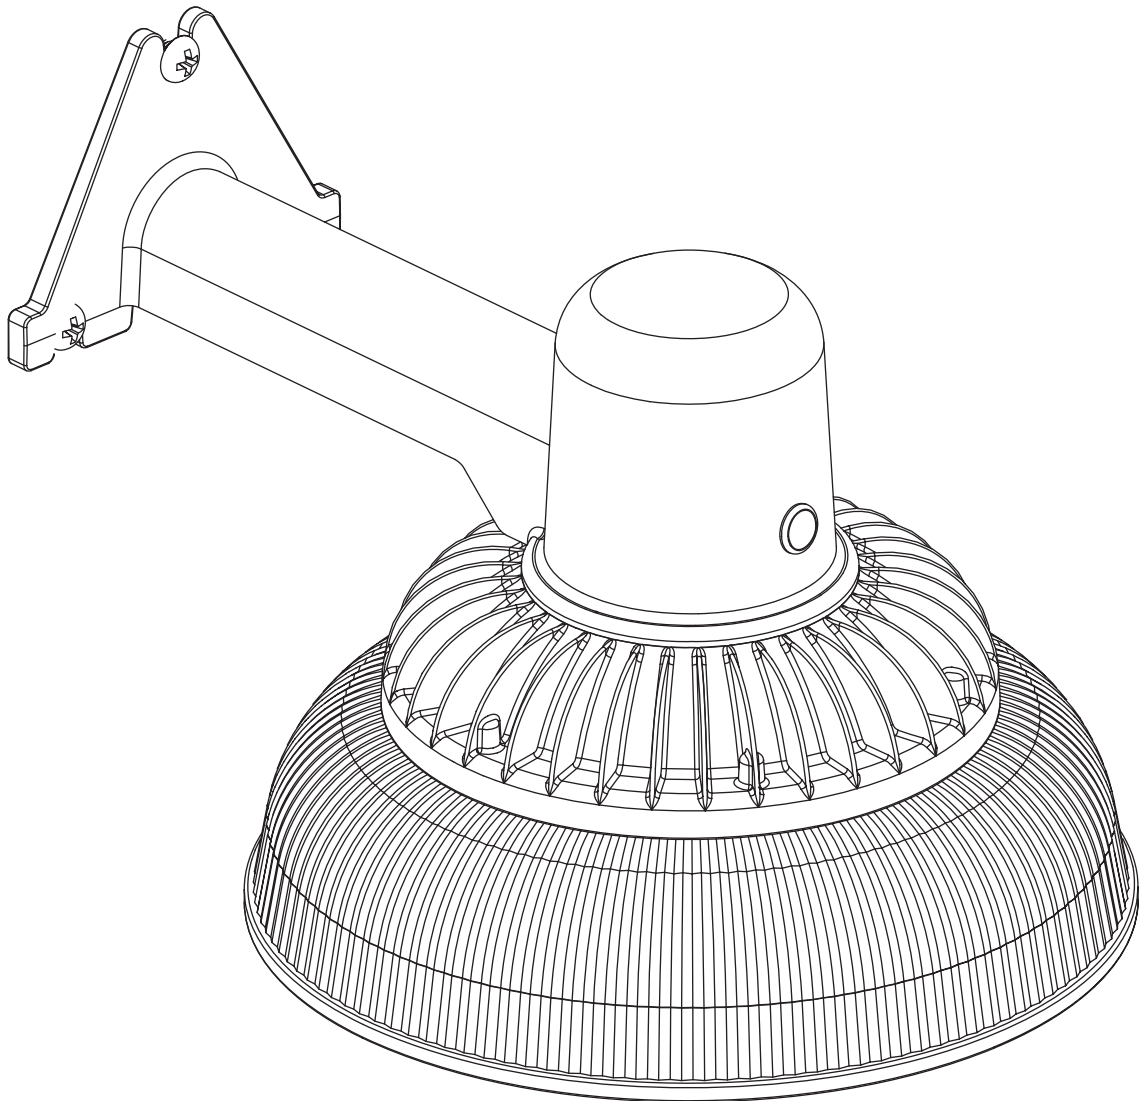

SAFETY INFORMATION

WARNING: Read all safety precautions and installation instructions carefully before installing or servicing this fixture. Failure to comply with these instructions could result in a potentially fatal electric shock and/or property damage.

- To reduce the risk of electrical shock or other personal injury, ensure the power is turned **OFF** at the fuse or breaker box before making any electrical connections.
- For outdoor use only.
- Must be connected to 120 volt, 60 Hz power source.
- Fixture should be mounted to a grounded junction box marked for use in wet locations.
- Suitable for wall mount.
- NOT suitable for ground locations. Minimum of 4 feet or higher.
- Wall lantern should be installed by a qualified electrician or person experienced with household wiring. The electrical system, and method of electrical connection of the fixture, must be in accordance with the National Electrical Code and local building codes.

SUITABLE FOR WET LOCATIONS

CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.

MINIMUM 90° C SUPPLY CONDUCTORS


THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

PRE-INSTALLATION

PLANNING INSTALLATION

- Carefully remove the fixture from the carton and check that all parts are included. Be careful not to misplace any of the screws or parts needed for installing the fixture.

HARDWARE INCLUDED

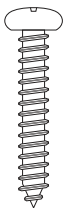

AA: ST6 Screw (3)




BB: Wire nut (3)

PARTS

A - Lamp

B - Lens/Reflector

C - Cover plate

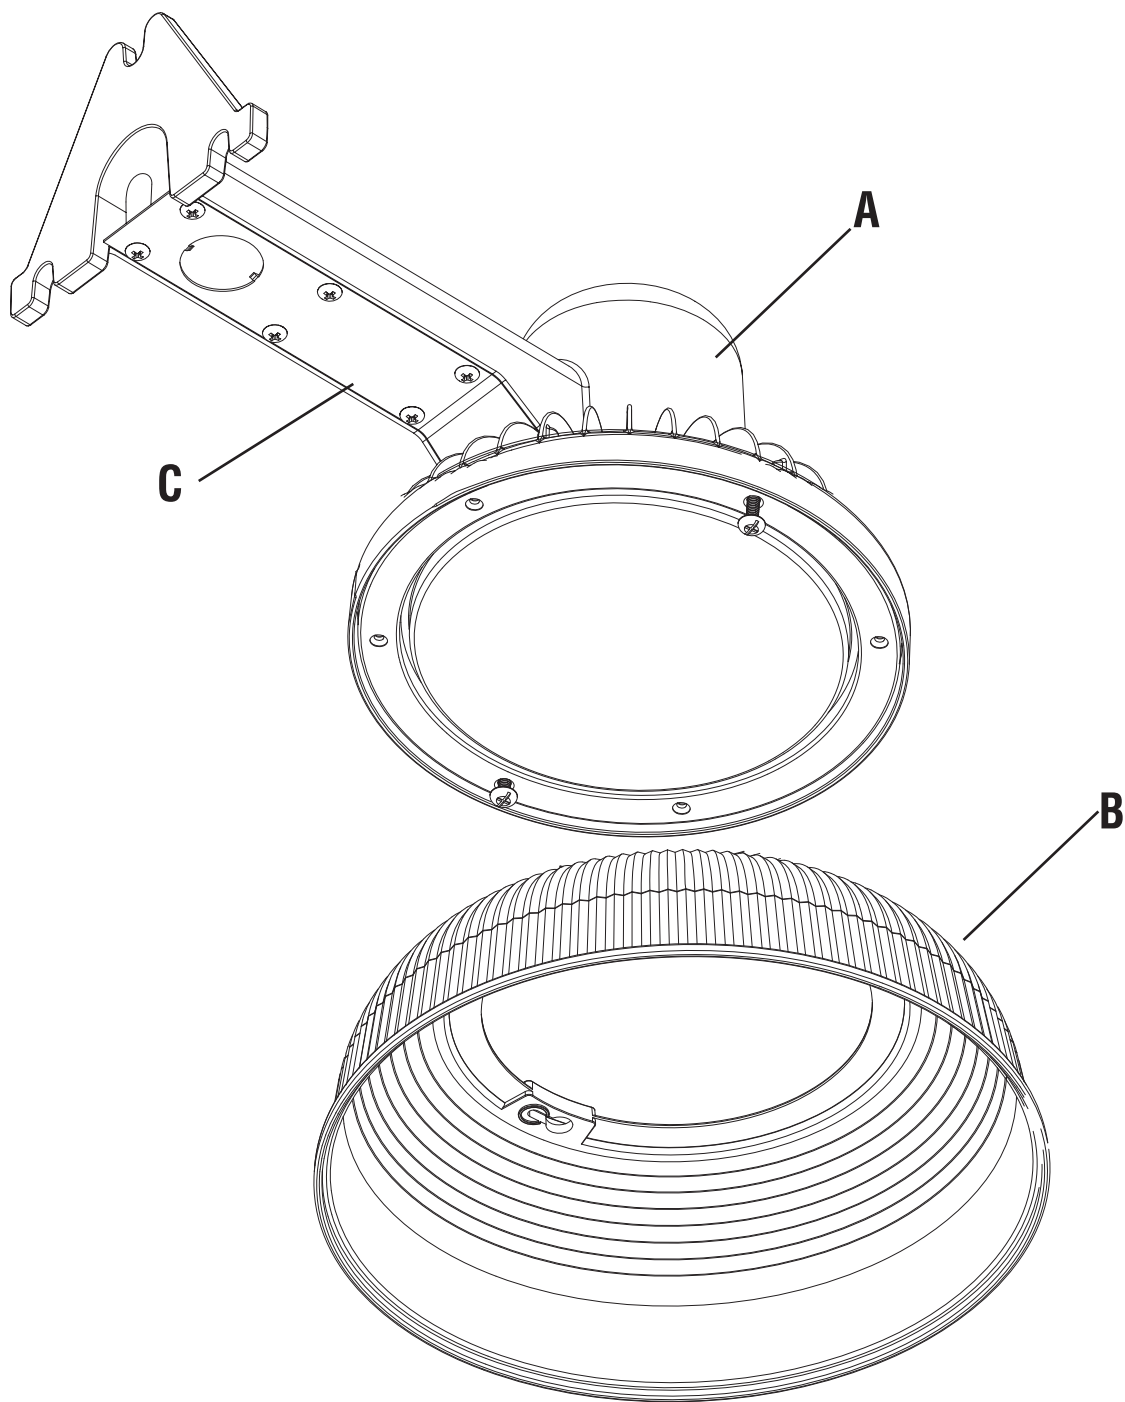

INSTALLATION



CAUTION: Turn **OFF** the circuit breaker and light switch before beginning installation.

IMPORTANT: Do not use this fixture with dimmers or timers.

- This fixture is suitable for wall mount only. It is not suitable for ground mount installation.
- The hardware included is for wood surface mounting only.
- For best performance, mount the fixture 2.4-3.6 m / 8-12 ft above the ground.

PREPARING THE FIXTURE




1. Align the holes on each side of the lens/reflector (B) with the screws on each side of the lamp (A) and attach the lens/reflector (B) to the lamp.
2. Turn the lens/reflector (B) to lock in place and tighten the screws.

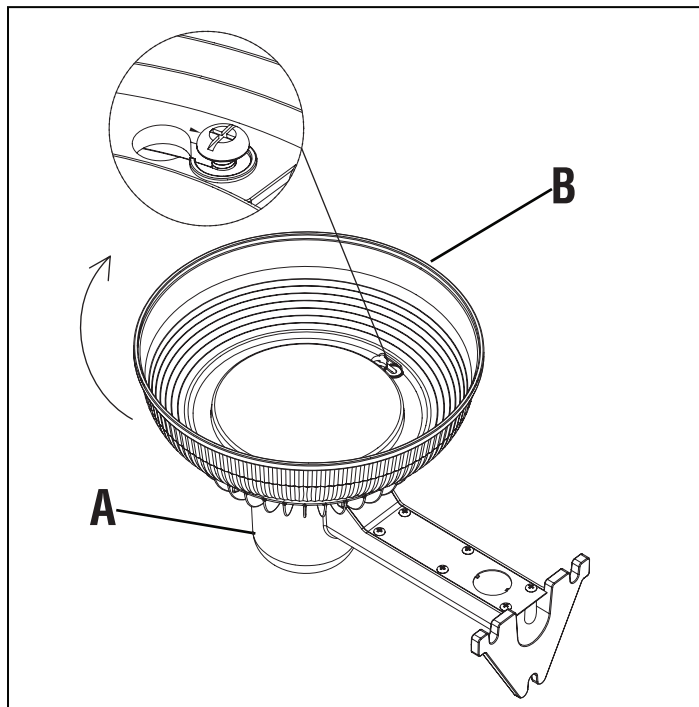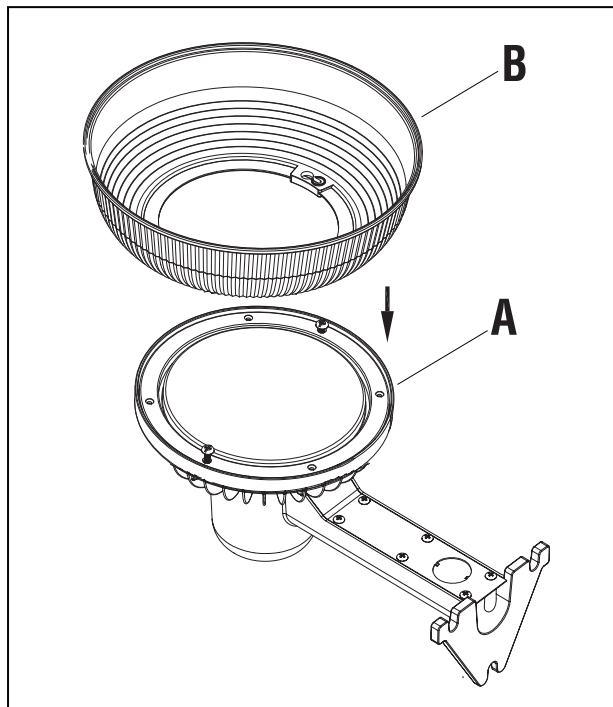

WALL MOUNT

1. Mark mounting hole locations and drill 4.7 mm / 3/16 in diameter pilot holes.
2. Attach the light fixture to the wall using the three included ST6 screws (AA).
3. Insert the two bottom ST6 screws (AA) first, leaving about 95 mm / 3/8 in of space under the head.
4. Place the fixture on the two bottom ST6 screws (AA) and install the top ST6 screw (AA).
5. Tighten the two bottom ST6 screws (AA).
6. For conduit mounting, remove the knockout on the bottom of the cover plate (C).
Secure the conduit, not included, to the cover plate (C) with a fitting in accordance with the National Electric Code. Thread the house supply wires through the hole.
7. Connect the house supply ground wire to the fixture ground (bare copper) wire using a wire nut (BB).
8. Connect the black fixture wire to the black house power supply wire and the white fixture wire to the white (neutral) house supply wire using the remaining wire nuts (BB).

NOTE: For proper connection, place the wire nuts over the wires and twist clockwise until tight.

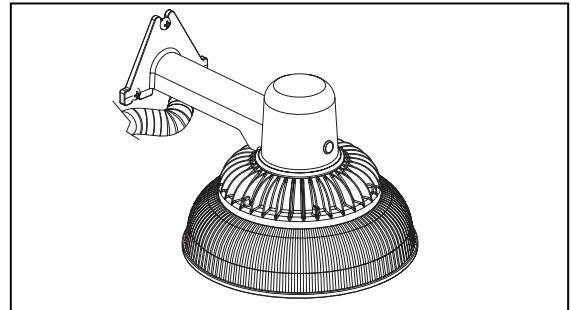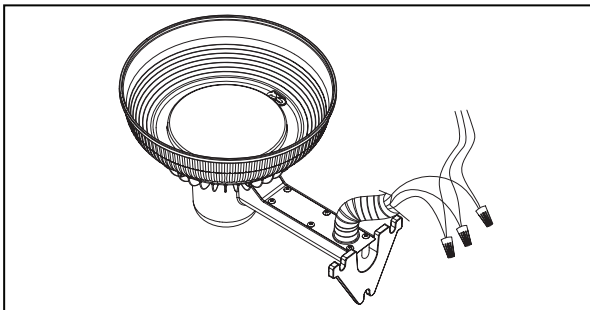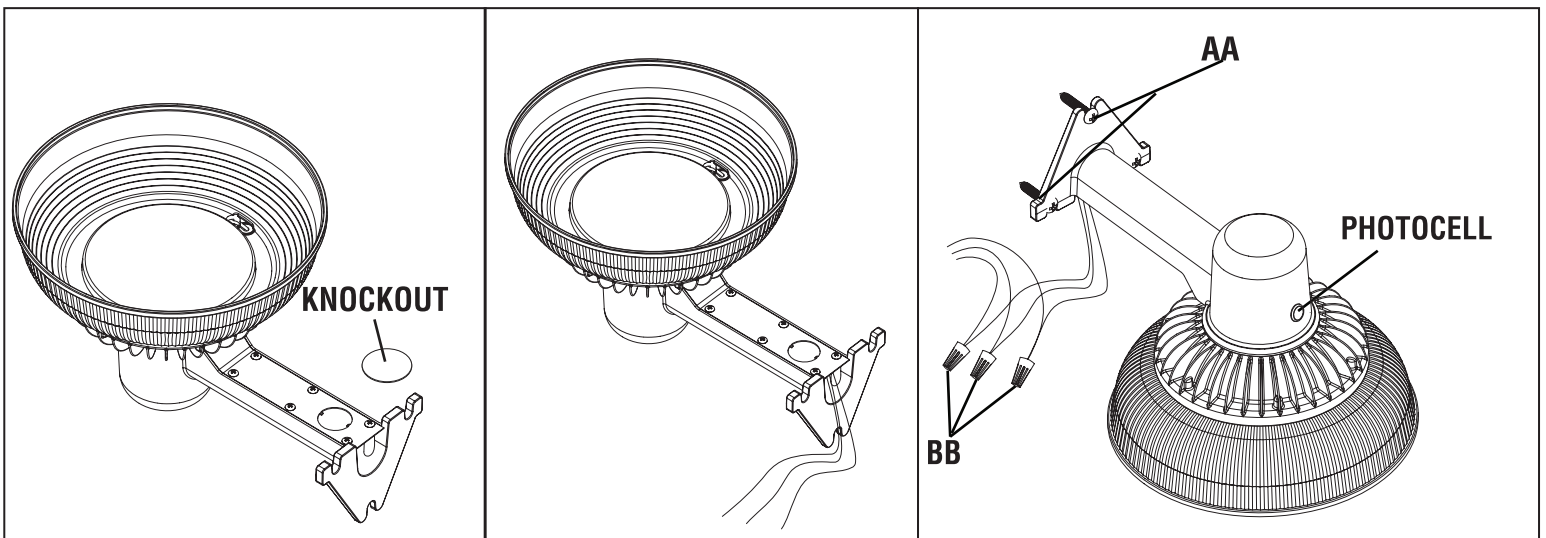

OPERATION

- To test operation during the daytime, cover the photocell with black electrical tape.
- Turn on the circuit breaker and light switch.

NOTE: Wait about one minute for circuitry to calibrate for first time use.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUCION
Lights will not come on.	A. Light switch is turned off. B. Fuse is blown or circuit breaker is turned off. C. Incorrect circuit wiring.	A. Turn light switch on. B. Replace fuse or turn circuit breaker on. C. Verify that fixture is wired properly.

FCC WARNING:

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTES: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.