


LED OUTDOOR WALL MOUNT LANTERN

MODEL: SS05XX-XXXX

USE AND CARE GUIDE

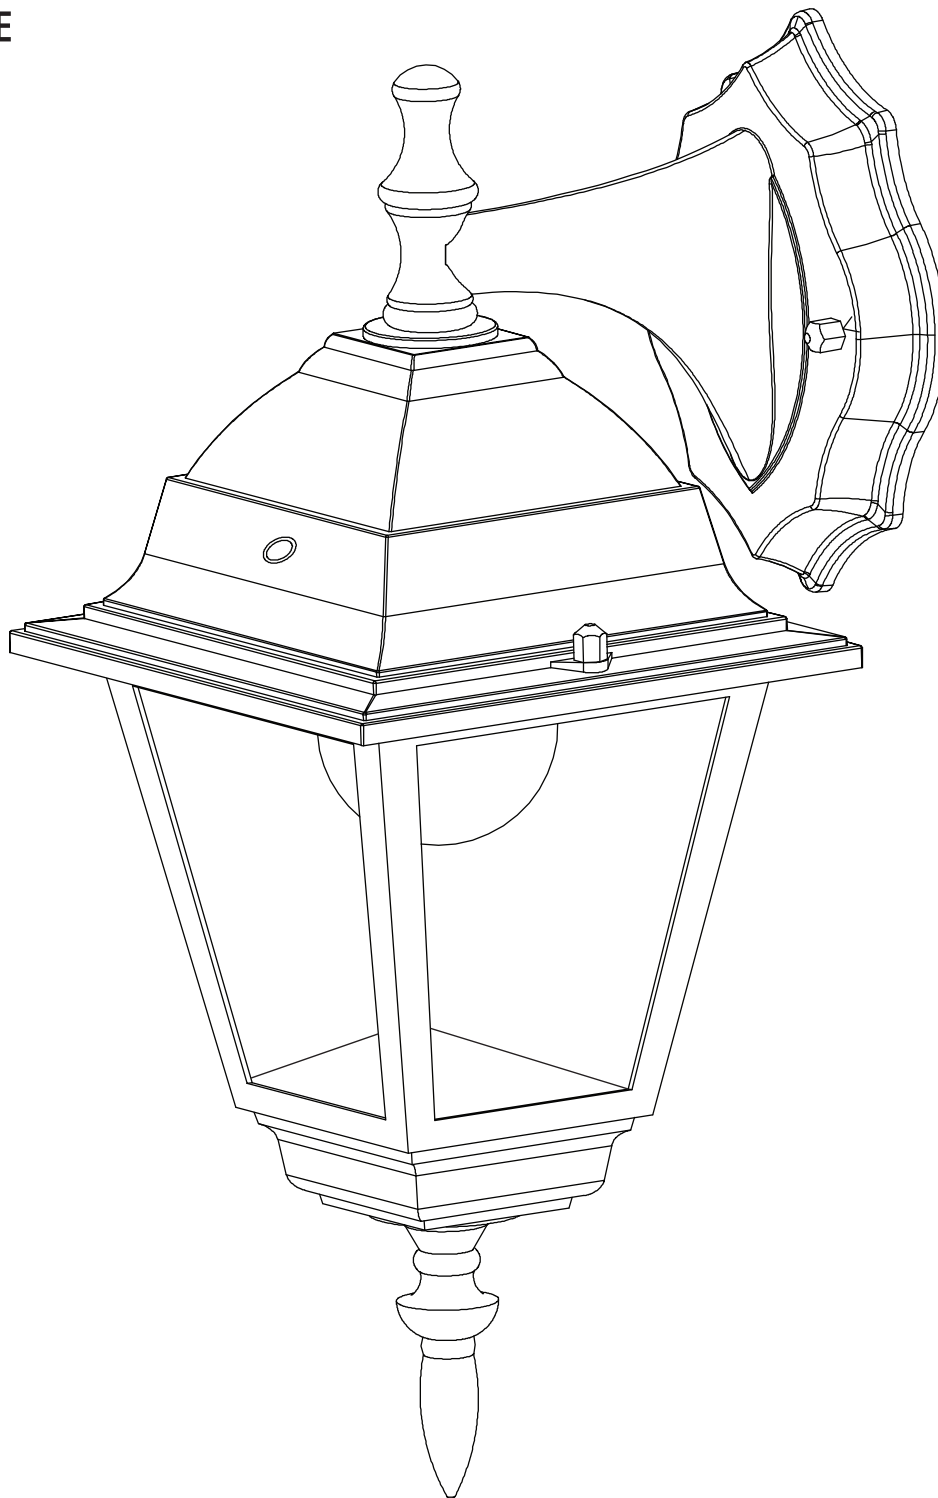

SAFETY INFORMATION

WARNING: Read all safety precautions and installation instructions carefully before installing or servicing this fixture. Failure to comply with these instructions could result in a potentially fatal electric shock and/or property damage.

- To reduce the risk of electrical shock or other personal injury, ensure the power is turned **OFF** at the fuse or breaker box before making any electrical connections.
- For outdoor use only
- Must be connected to 120 volt, 60 Hz power source
- Fixture should be mounted to a grounded junction box marked for use in wet locations
- Suitable for wall mount
- NOT suitable for ground locations. Minimum of 4 feet or higher
- Wall lantern should be installed by a qualified electrician or person experienced with household wiring. The electrical system, and method of electrical connection of the fixture, must be in accordance with the National Electrical Code and local building codes.

SUITABLE FOR WET LOCATIONS

CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.

MINIMUM 90° C SUPPLY CONDUCTORS


THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

PRE-INSTALLATION

PLANNING INSTALLATION

- Turn off the electrical power at the fuse or circuit breaker box before installing or servicing any part of this fixture.
- Carefully remove the fixture from the carton and check that all parts are included. Be careful not to misplace any of the screws or parts needed for installing the fixture.


HARDWARE INCLUDED

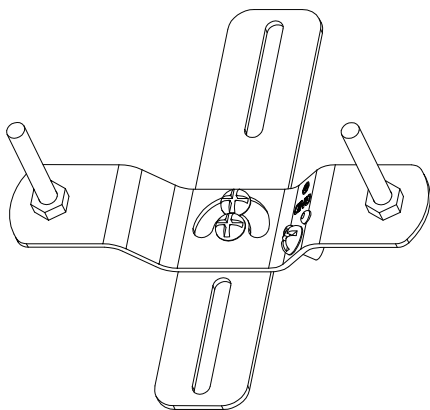


A: Bracket with screws and nuts (1)




B: Washers (2)




C: Screw Caps (2)



D: Wire Nuts (3)




E: Screws (2)

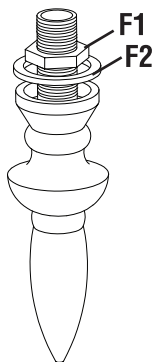

F: Finial (1)
F1: Nut(1)
F2: Washer (1)

PARTS

A - Bracket
F - Finial
G - Lantern
H - Light Sensor

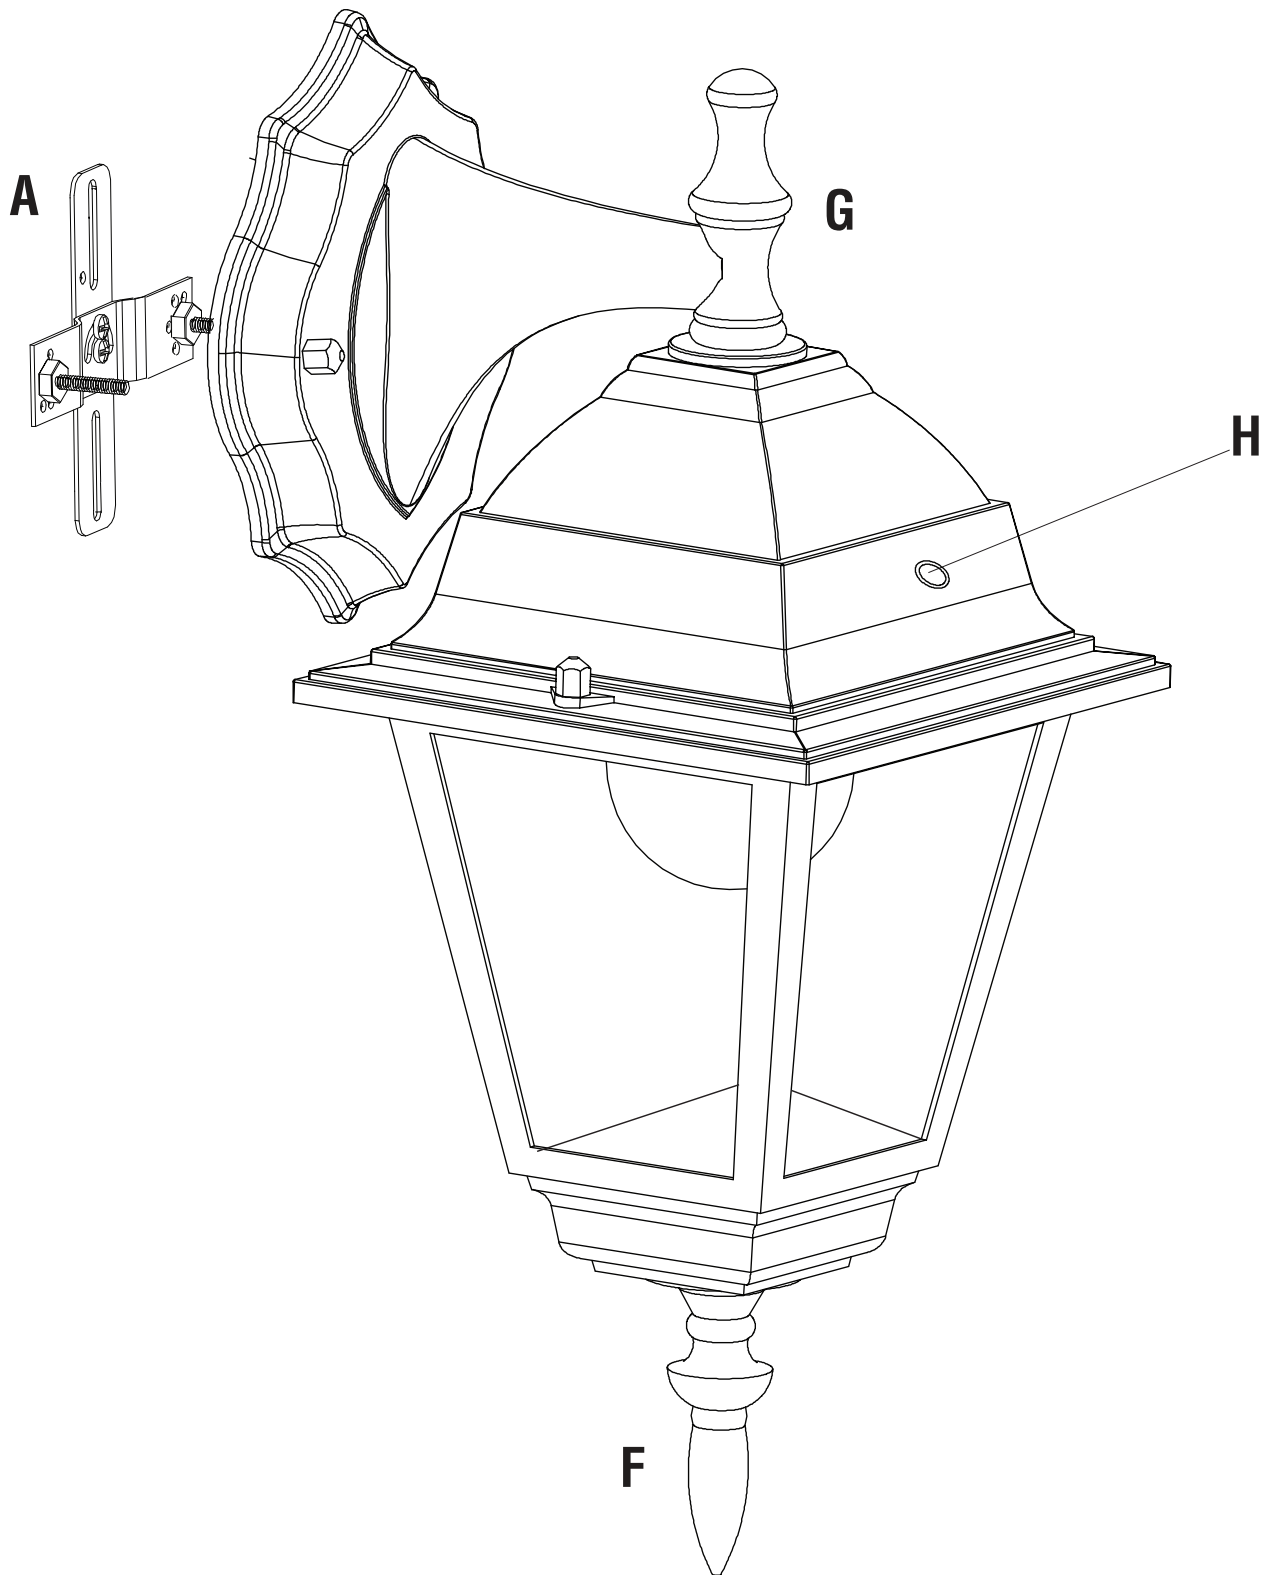


INSTALLATION

CAUTION: Before beginning installation turn off the circuit breaker and light switch.


STEP 1

Unscrew washer (F2) and nut (F1) from Finial (F). Thread Finial (F) through hole in bottom of Lantern (G). Place washer (F2) on thread and tighten with nut (F1) until secure.

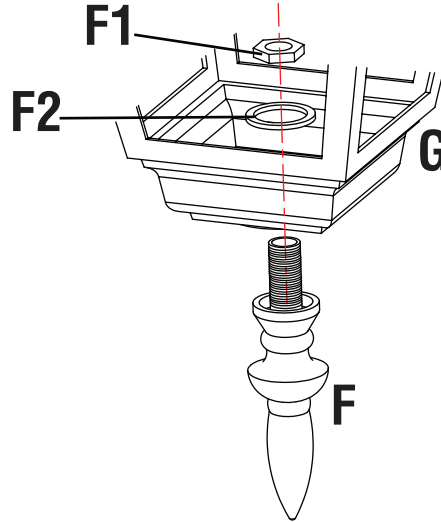


STEP 2

Position the mounting bracket (Part A) to the junction box and secure using screws (Part E). Connect the AC wires to the corresponding wires (BLACK to BLACK, WHITE to WHITE and GROUND to GROUND) in the junction box using the wire nuts (Part D).

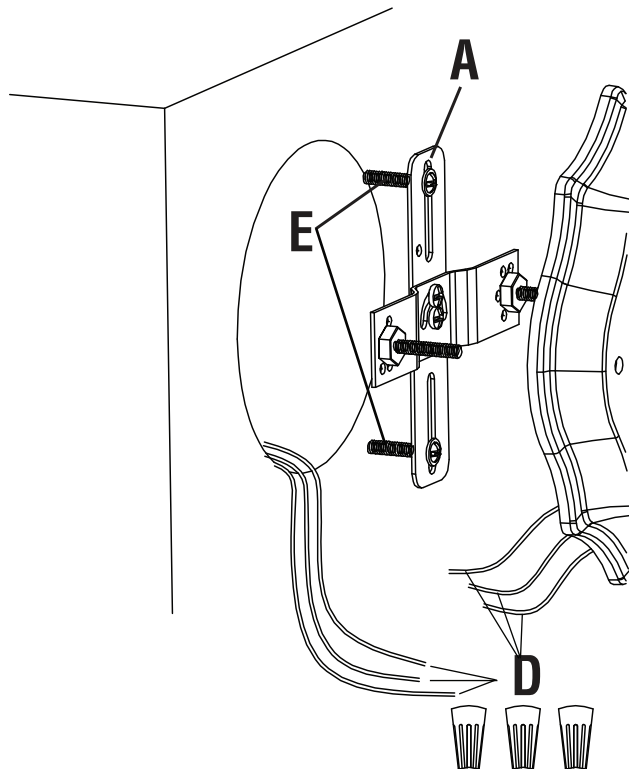


STEP 3

NOTE: The screws and nuts that are pre-installed on the mounting bracket (Part A) should fit loose during test fitting of the wall lantern (Part G). Place wall lantern (Part G) over pre-installed screws and nuts on the mounting bracket (Part A) and through the mounting holes located on both sides of the wall lantern mounting base. While holding the wall lantern (Part G) over mounting bracket (Part A) with the pre-installed screws and nuts, adjust both screws protruding through mounting holes of the wall lantern mounting base to a height of 3/16 inch. Remove wall lantern (Part G) and tighten pre-installed nuts on the mounting bracket (Part A) while retaining the adjusted screw height of 3/16 inch in the previous step. Place wall lantern (Part G) back into position and secure to the mounting bracket (Part A) using washers (Part B) and screw caps (Part C) onto the protruding screws that were adjusted to a height of 3/16 inch in the previous step.

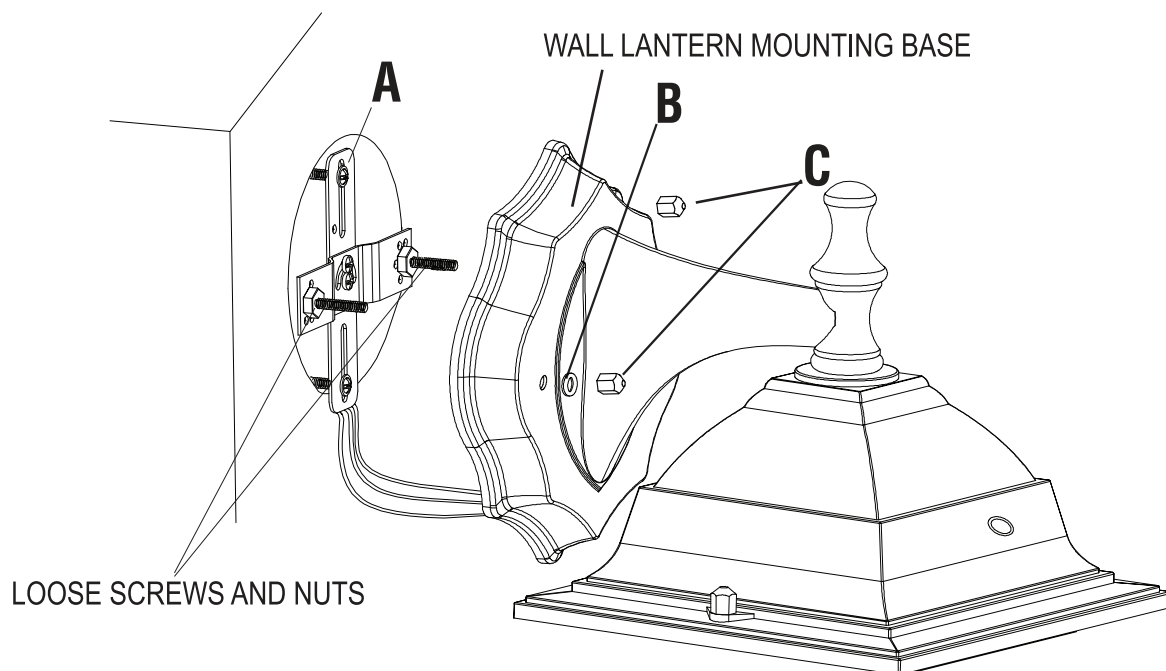

STEP 4

Caulk completely around the area where the canopy meets the wall surface with silicone caulking compound to prevent water from seeping into the junction box. Turn power ON at the circuit breaker. Verify light function.

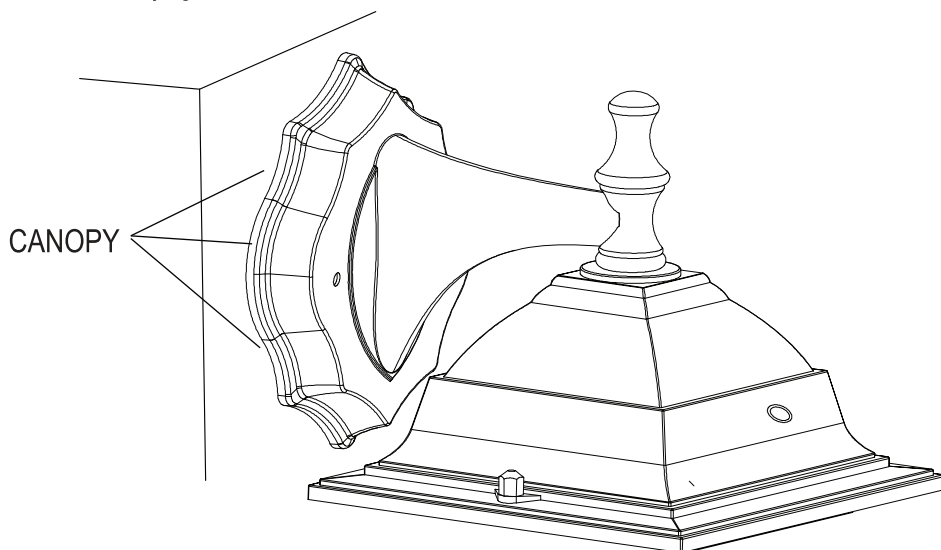

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Lights will not come on.	A. Light switch is turned off. B. Fuse is blown or circuit breaker is turned off. C. Incorrect circuit wiring.	A. Turn light switch on. B. Replace fuse or turn circuit breaker on. C. Verify that fixture is wired properly.

FCC WARNING:

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTES: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.